

Systeméd Controlled Drugs Safes




Manufactured from 2mm thick steel, controlled drugs safes have a white powder coated finish and are supplied with an electrical switch for wiring to a remote alarm system.

Small and medium safes have one internal shelf and the large safes have two internal shelves.


Large (CDW96)

655 x 350 x 760mm

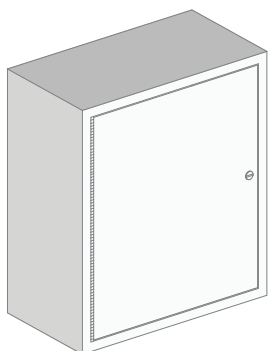


Large (CDW95)

455 x 350 x 760mm

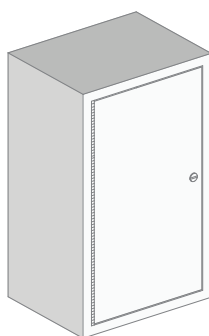


Large (CDW94)

600 x 300 x 600mm

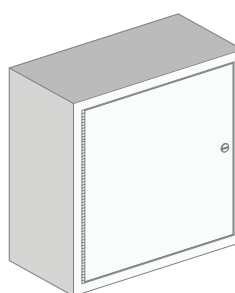


Medium (CDW92)

400 x 250 x 600mm

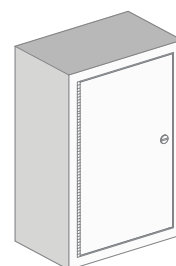


Medium (CDW93)

600 x 250 x 350mm

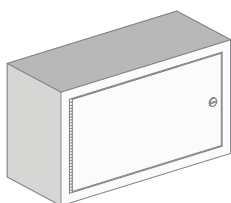

Small (CDW91)

400 x 250 x 350mm

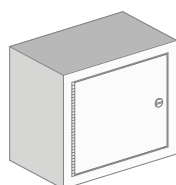

SIZE (W x D x H)	L/H DOOR	R/H DOOR
Large 655 x 350 x 760mm	CDW96.6535.11S	CDW96.6535.12S
Large 455 x 350 x 760mm	CDW95.4535.11S	CDW95.6535.12S
Large 600 x 300 x 600mm	CDW94.6030.11S	CDW94.6030.12S
Medium 400 x 250 x 600mm	CDW92.4025.11S	CDW92.4025.12S
Medium 600 x 250 x 350mm	CDW93.6025.11S	CDW93.6025.12S
Small 400 x 250 x 350mm	CDW91.4025.11S	CDW91.4025.12S

Data Sheet

Systeméd Controlled Drugs Safes

Standards

Designed to meet and exceed the requirements of the 'Misuse of Drugs' (Safe Custody) Regulations 1973 and BS2881: 1989 Level 2.

Locking

Heavy duty 6 pin lock compliant with BS3621. Over 100k combinations and non-mastered key. 18mm bolt throw.

Electrical

Door operated switch for connection to remote alarm.

External Lighting


Controlled drugs safes can be supplied with an external warning light if required. Please note however that regulations state that 'nothing shall be displayed outside a safe or cabinet to indicate that drugs are kept inside it' (Misuse of Drugs (Safe Custody) Regulation 1973).

Fixing

Regulations state that controlled drugs safes should be positioned so that they can be bolted to a wall of solid construction. Where this is not possible the safe must be bolted through the wall to a welded plate to embrace as many studs as possible.




CD safe micro switch box

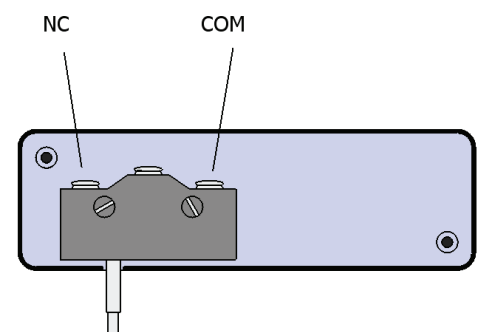

Door activated micro switch (voltage free). Use 'common' and 'normally closed' terminals to connect to remote alarm, etc.

Universal CD safe back-plate

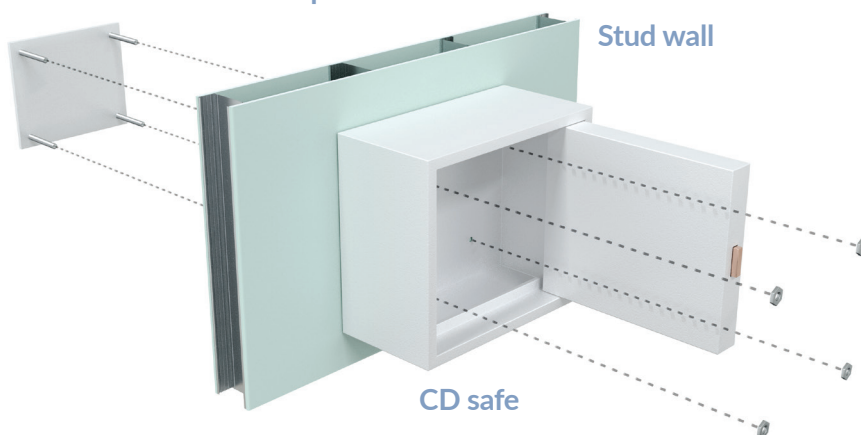

Universal CD Safe Back-plate

Designed to fit all sizes of Systeméd CD safe, this white powder-coated back-plate is 600 x 600 x 3mm and is supplied complete with studding connectors, fully welded to the plate to suit safe fixing holes.

UNIVERSAL CD
SAFE BACK-PLATE

CDSBP-UVL

